

T

TECHNICAL DATA SHEET

P




PREPARATION BEFORE
INSTALLATION

I




INSTALLATION STEPS



1. Never install unprotected glass edges against a hard foundation.
2. After application/sealing the silicone should not be exposed to water for 24 hours.
3. The shower should be thought of as shower-tight, not watertight. To expose critical points to water under high pressure can result in some leakage.
4. Because of continual product development certain details may differ in the installation instructions.

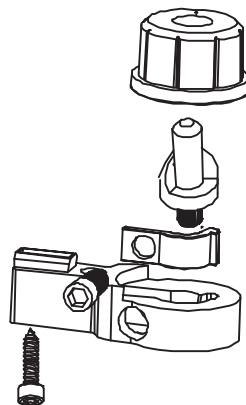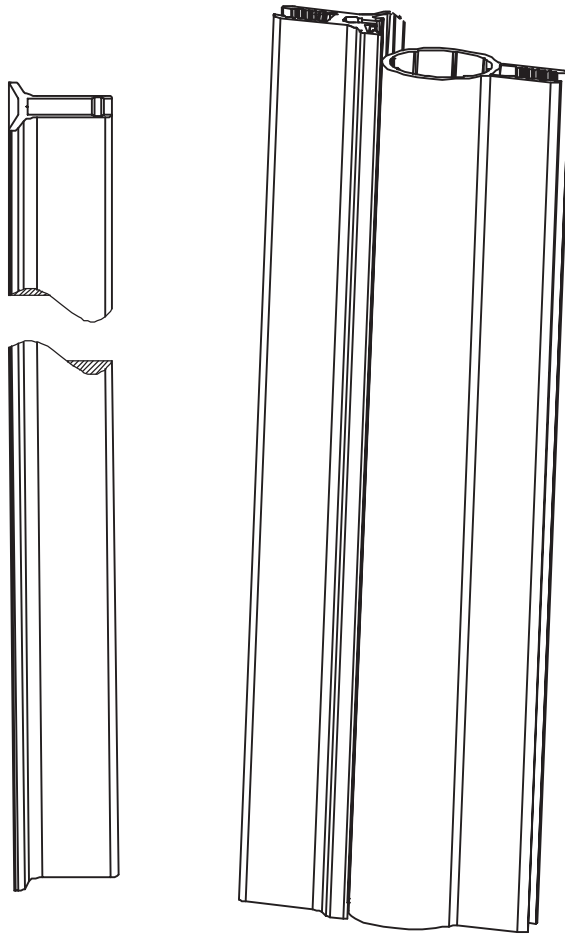
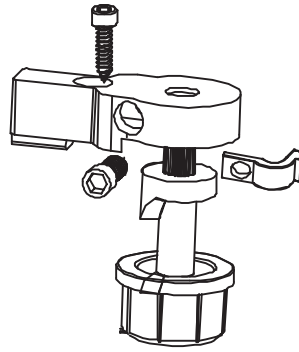


PREPARATION BEFORE INSTALLATION

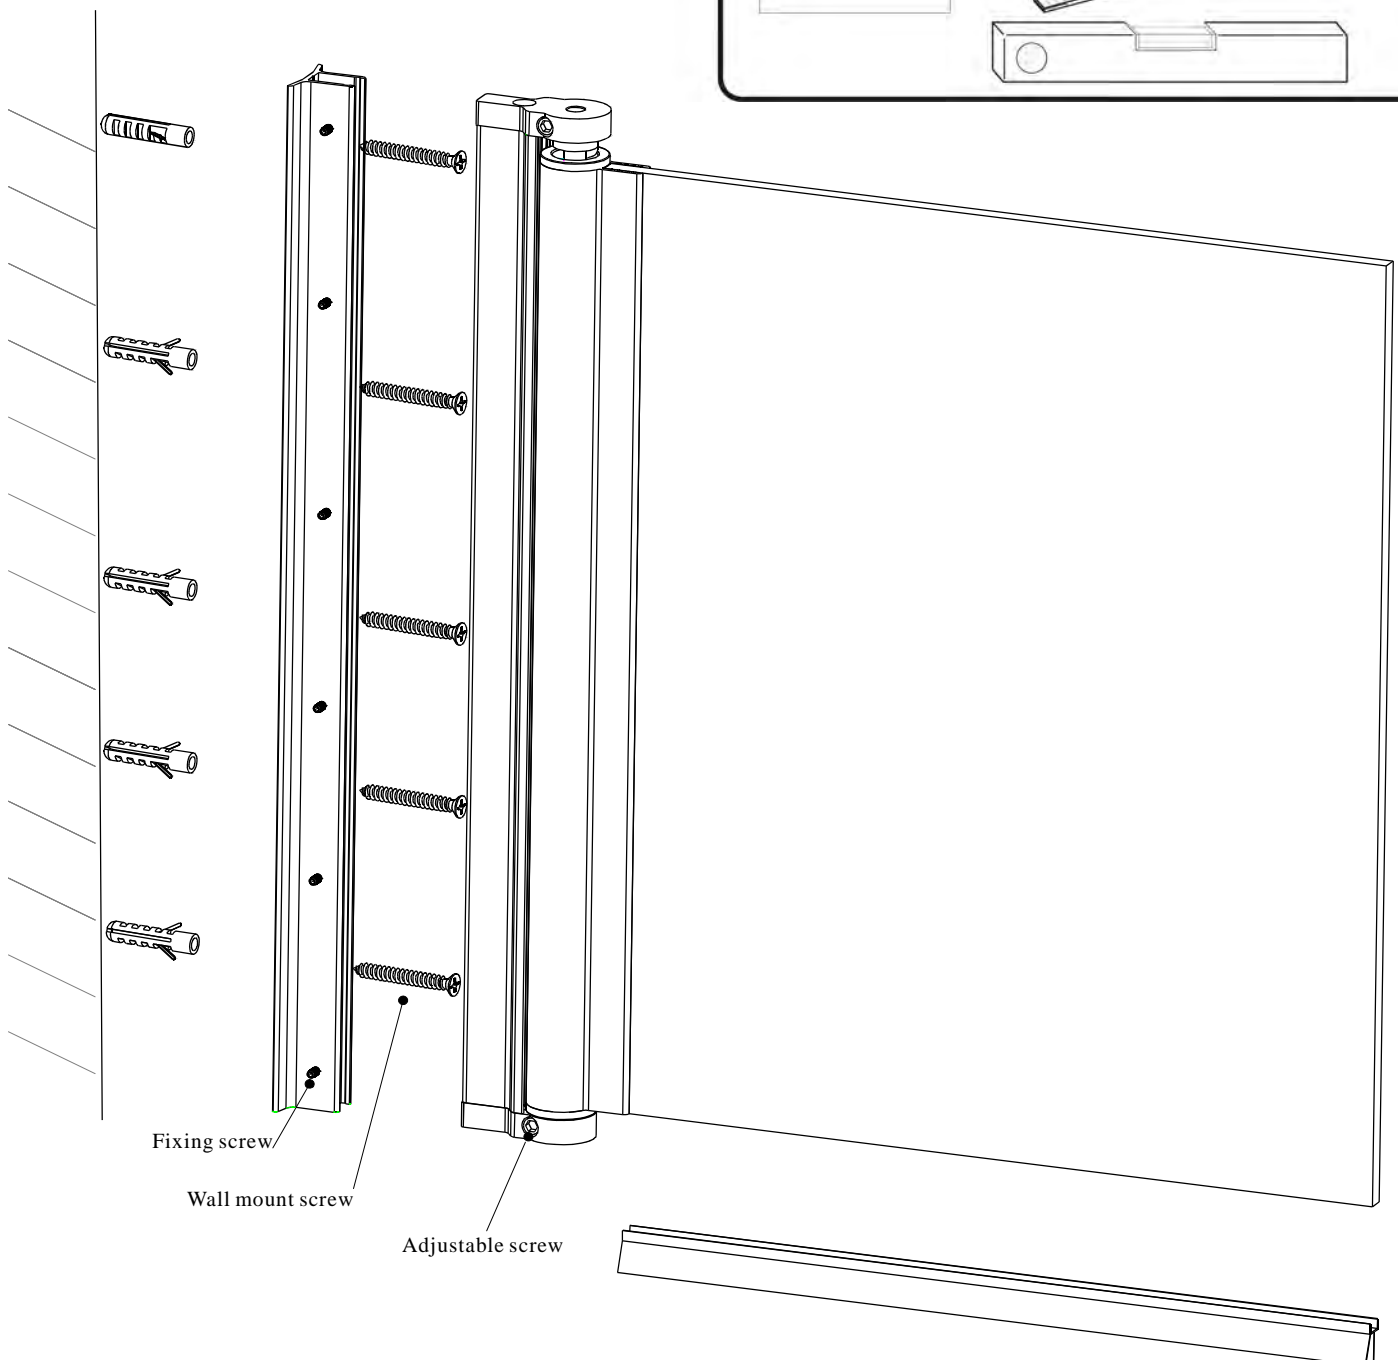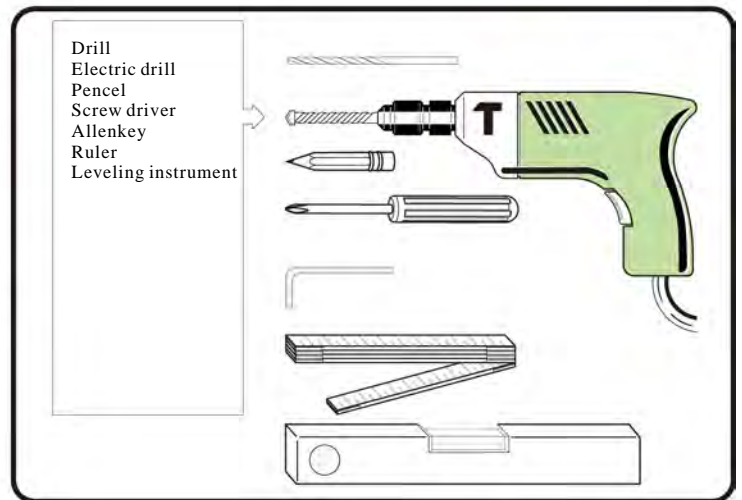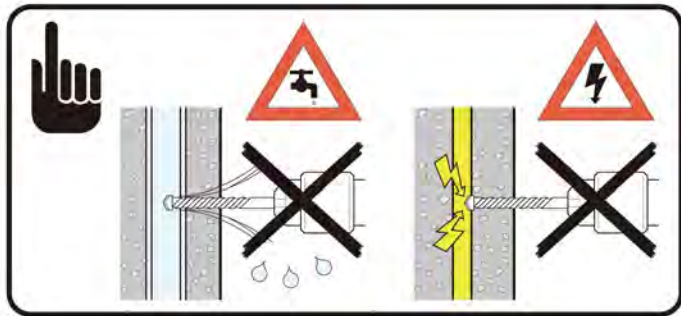


INSTALLATION STEPS


A1

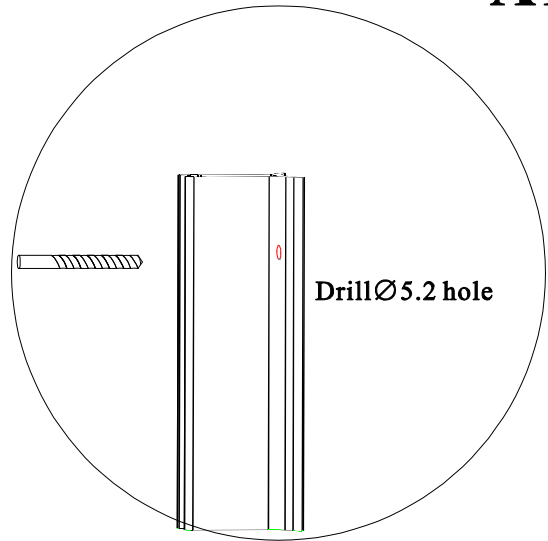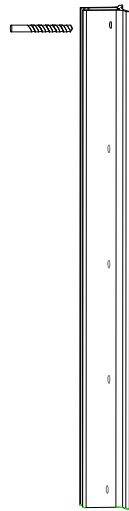

A2

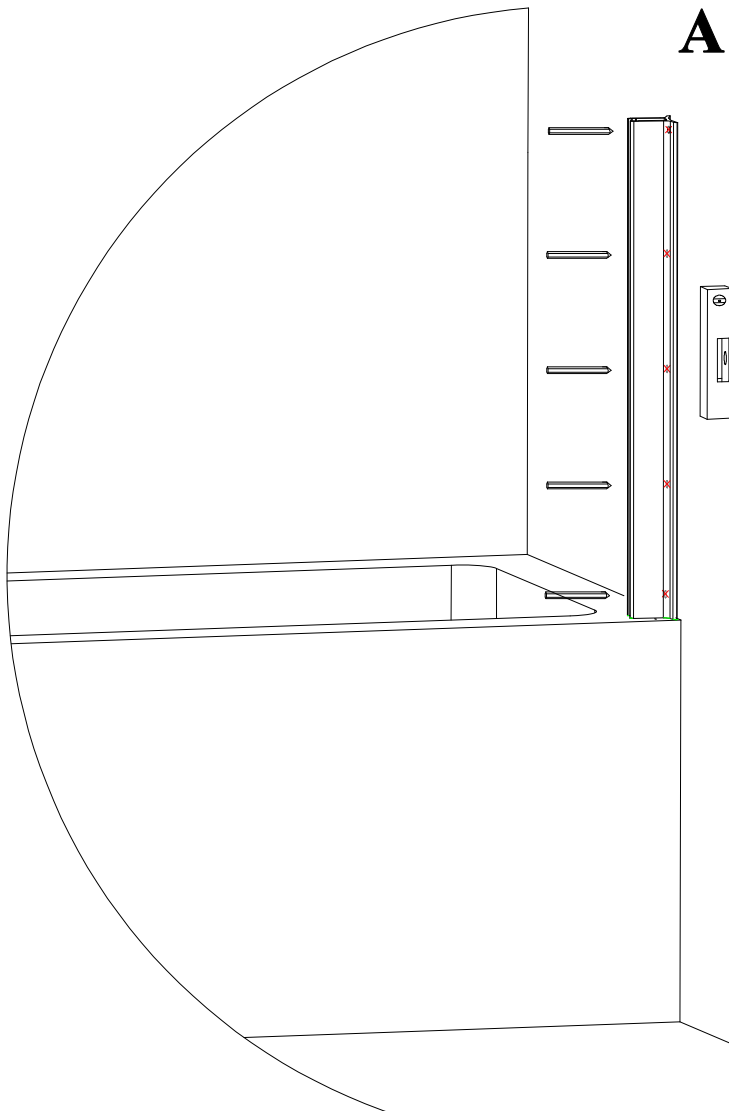


A3



Drill Ø 8 hole


Put a drop of silicone into each hole drilled on the wall prior to insert an white wall plug

A4

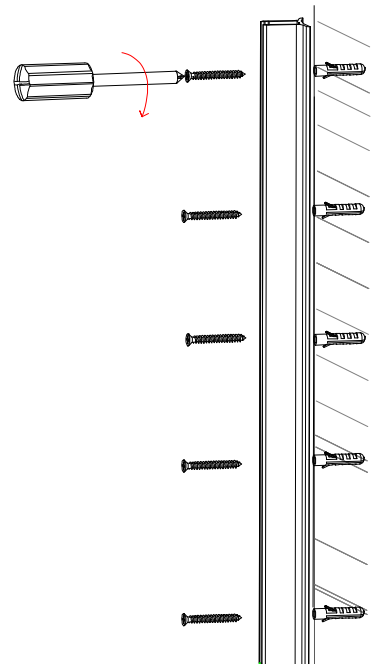


INSTALLATION STEPS


B1

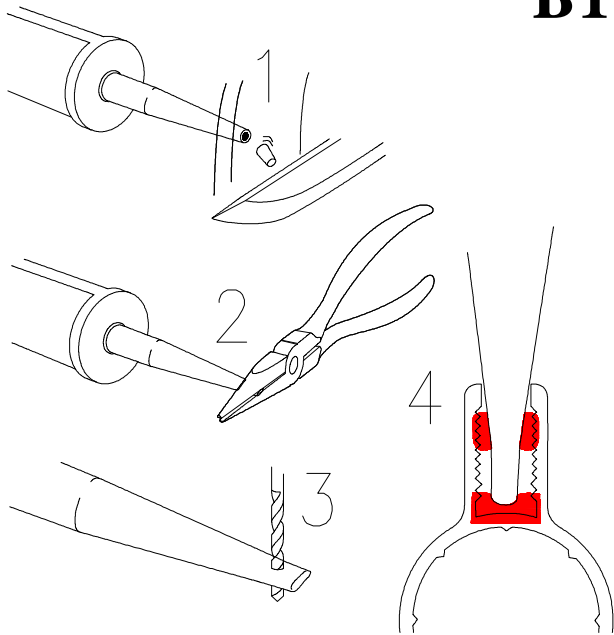



B2

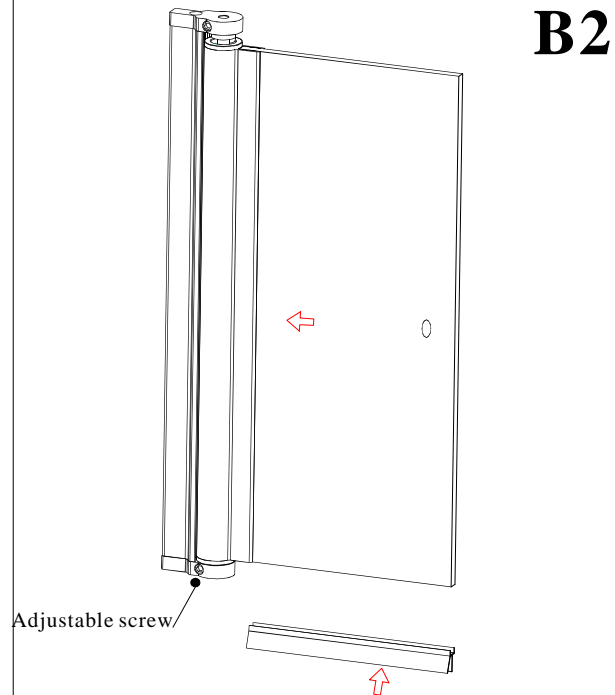

B3

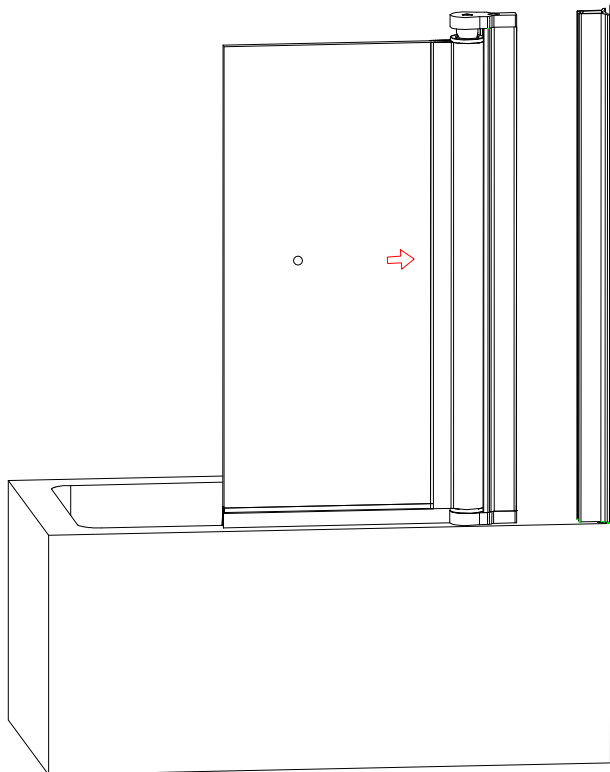


B4

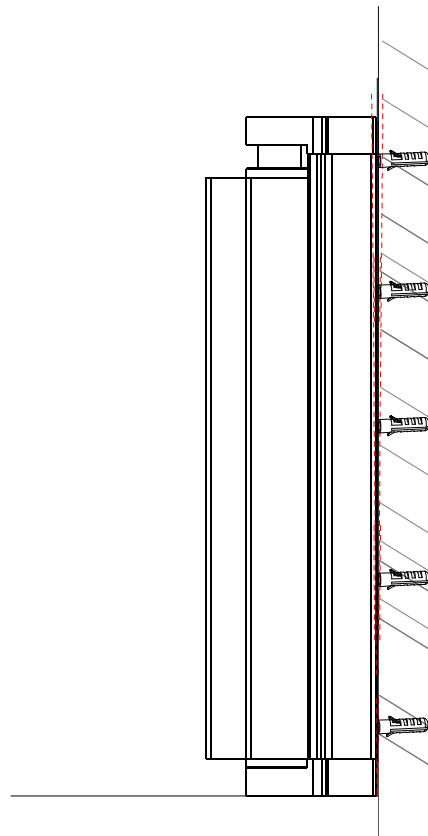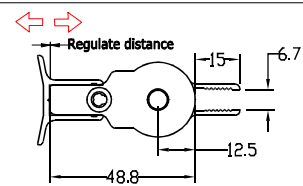


INSTALLATION STEPS


C1




Drill $\varnothing 4.5$ hole

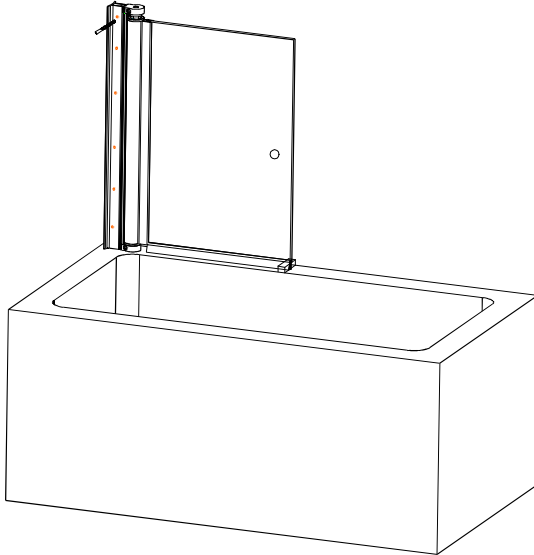

C2

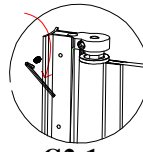


C2.1

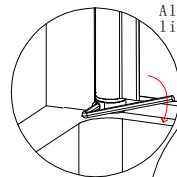


C2.2

Always adjust the lift function.

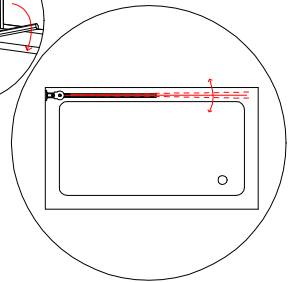


C2.3

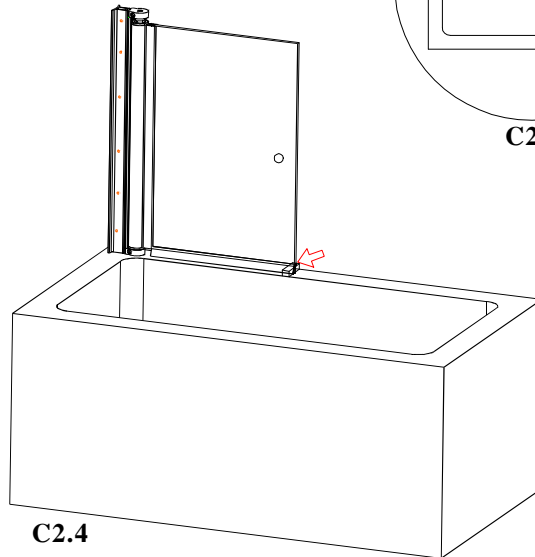

C2.4

C3

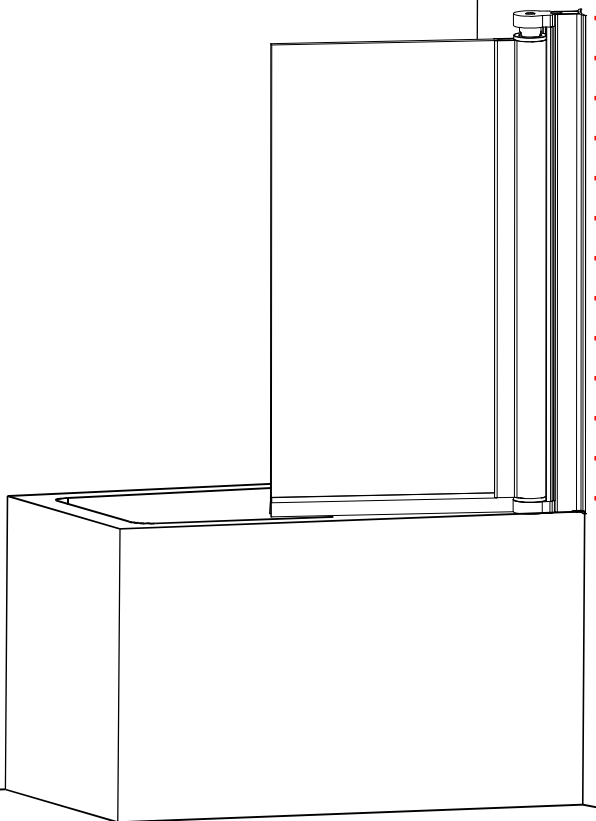

24 HOURS